

INSTALLATION INSTRUCTIONS

Remodel Housing - 2000, 3000 and 4000 Series

DO NOT INSTALL IN INSULATION - SUITABLE FOR DAMP LOCATION

CA2000 - CA2000D - CA2000S - IT2000CE - IT2000CE2 - IT2000CM - IT2000CM2 - IT2000CM3
 IT2000E - IT2000E2 - IT2000M - IT2000M2 - IT2000M3 - IT2000T - IT3000E - IT3000E2 - IT3000LE
 IT3000LE2 - IT3000LM - IT3000LM2 - IT3000LM3 - IT3000LT - IT3000M - IT3000M2 - IT3000M3
 IT4000M - IT4000M2 - IT4000E - IT4000E2

WARNING - FIRE HAZARD

Only magnetic low voltage dimmers are approved for use with MR16 and LED MR16 lamps in Contrast lighting products with a magnetic transformer.

The use of any other dimmer may cause a fire.

1. SHUT OFF ELECTRICAL SUPPLY AT SOURCE.

2. Bring the electrical wiring in the ceiling respecting all codes.

Cut a hole:

2000 Series: Ø 4-1/4" (108 mm) in the ceiling

3000 Series: Ø 3-5/8" (92 mm) in the ceiling

4000 Series: Ø 3-1/4" (83 mm) in the ceiling


3. Remove the junction box cover by pushing on the clip. Remove the appropriate knock-out(s) to accommodate your wiring. Connect the wires coming from the supply to the box wires, and match the colors together (White/White, Black/Black, Green/Green, see **Wiring Diagram**). Fix the junction box cover back in place.

4. Push the fastening hooks inside the housing through the lateral opening. Slide the housing into position. Push the fastening hooks through the lateral openings.




5. Fasten the fixture with the adjustment screws.

6. Insert: a) the lamp
 b) the UV lens (only with MR16 and GU/GZ-10)*
 c) the trim

***Use supplied glass lens only with unprotected MR16 lamps.**

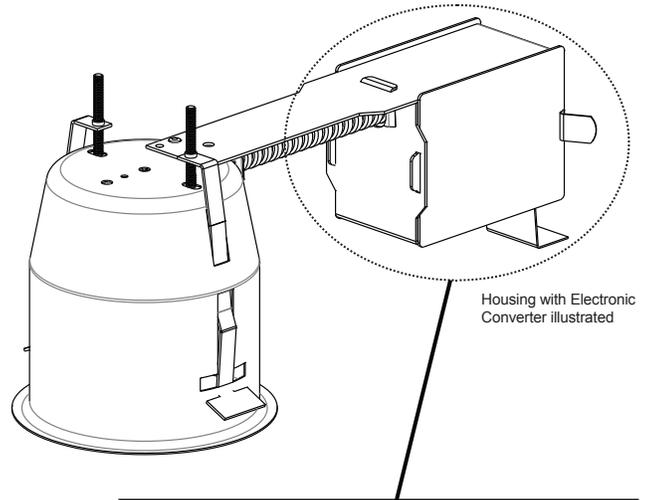

Wiring Diagram

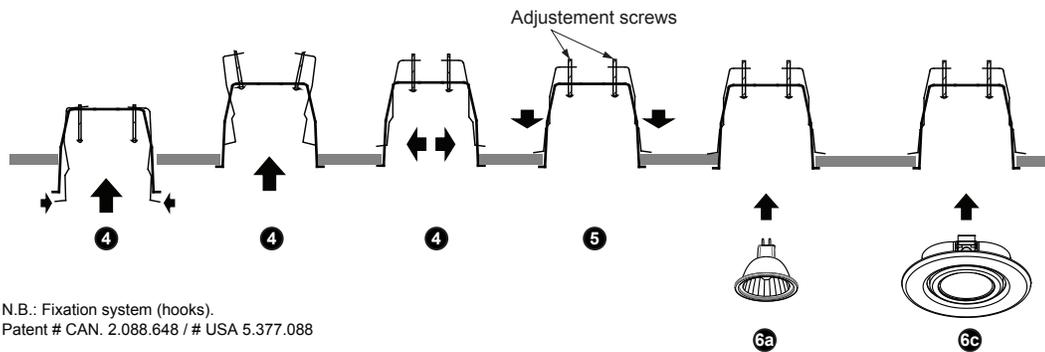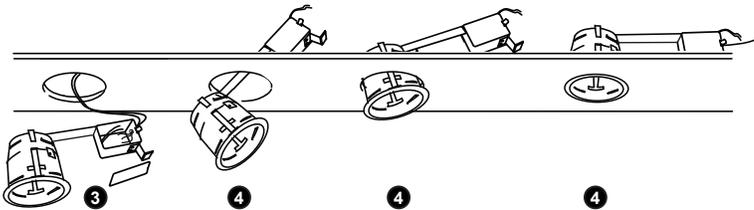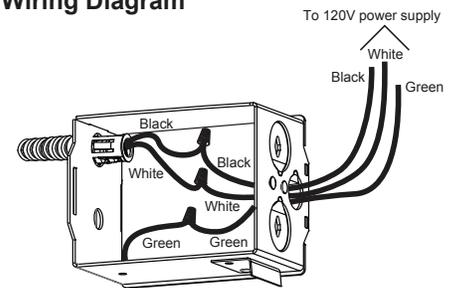

N.B.: Fixation system (hooks).
 Patent # CAN. 2.088.648 / # USA 5.377.088

For dimming requirements, refer to dimmer manufacturer's specifications MR16 GZ5.3 bulb base configuration may vary between manufacturers resulting in various lengths of pins. DO NOT OVER PUSH AT INSTALLATION.

Please keep these instructions for maintenance reference.



WARNING

The use of other company's (non-Contrast) products or components (e.g. trims) in conjunction with Contrast products may not be covered by UL approvals, and could be hazardous. Such use automatically voids all Contrast warranty and responsibility from any problems that may result from such use.



WARNING

SHOCK AND FIRE HAZARD

Most dwellings built before 1985 have supply wires rated 60°C. Consult a qualified electrician before installing.



It is very important not to exceed the lamp wattage indicated.

WARRANTY: CONTRAST LIGHTING M. L. INC. guarantees the components against manufacturing defects for a period of one (1) year, under normal use with proof of purchase. The obligation of the manufacturer consists in the cost of the components and does not cover the cost of labor and transport for replacement. For all claims, please contact your local supplier. See our Web site for additional warranty details.

CONTRAST
 LIGHTING

CONTRAST LIGHTING M. L. INC.
 1009 RUE DU PARC-INDUSTRIEL
 LÉVIS QC G6Z 1C5
 CANADA

Tel: 1-888-839-4624
 Fax: 1-877-839-7057
 info@contrastlighting.com
 www.contrastlighting.com

© 2015 Contrast Lighting M.L. Inc.
 All rights reserved
 EC120 (Rev. C) - 100499
 2015-03

PRINTED IN CANADA