


INSTALLATION INSTRUCTIONS

ISCA Series IC Housings (except polyurethane)


ISCA2000 - ISCA2000D - ISCA2550 - ISCA2575 - ISCA2675 - ISCA3600 - ISGU2575

BEFORE STARTING: If spacing between ceiling joists is LESS THAN 12", shorten the mounting bars before installing by cutting each of the mounting bar sections at the cutting marks indicated below.

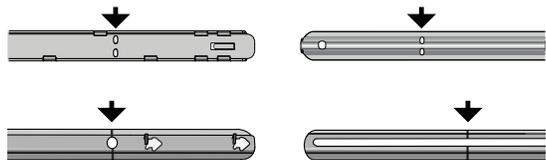


1. Shut off electrical supply at source.
2. Remove the can from the housing.
3. Slide mounting bars onto the ends of the housing plate, between the folded tabs.
4. Locate the position to which you wish to install the housing then secure mounting bars onto the ceiling joists or the suspended ceiling tee bars.


Joists: Hammer tack point (A) or screw (B) the mounting bar onto the joists.

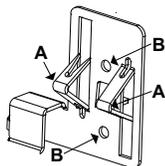

Suspended ceiling: Hang the mounting bars on the tee bars.

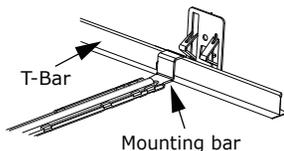


5. Adjust the housing to its final position.
6. Fold and press tabs to firmly lock the mounting bars to the housing plate.

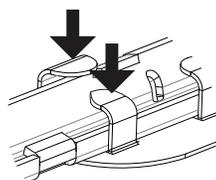


7. Bring the electrical wiring to the junction box, as per applicable electrical codes.
8. Open the junction box and connect the wires (Black/Black, White/White and Green/Green).

IMPORTANT: Leave an extra length of 10" (25 cm) of supply leads and ground wire inside the junction box.

9. Close the junction box.
10. Close the ceiling and cut hole in ceiling:
 - ISCA2000, ISCA2000D: Ø 4-1/4" (108 mm)
 - ISCA2550, ISCA3600: Ø 3-5/8" (92 mm)
 - ISCA2575, ISCA2675, ISGU2575: Ø 4-5/8" (117 mm)
11. Connect the can and junction box wires.

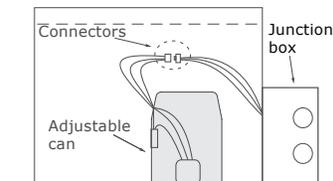

12. Insert the can into the mounting frame, pushing the fastening hooks through the lateral opening and secure the pot against the ceiling with the two adjustment screws.

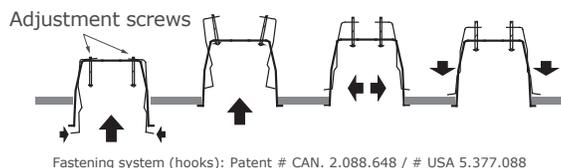

13. Complete the installation:

PAR20 with trim



Non orientable: Screw the lamp in the housing. Fix the trim into the can.

Adjustable trim (ISCA2000D): Screw the lamp in the socket. Fix the lamp in the trim. Fix the trim into the can.

PAR20, PAR30, GU24 trimless



Screw the lamp in the socket.

With baffle and collar: Insert the baffle in the collar then fix assembly into the can.

B2675* trim: Insert the lamp in the socket, and fix the trim into the can.

*Not available with ISGU2575 housing.



Please keep these instructions for future reference.



WARNING - The use of another company's (non-Contrast) products or components in conjunction with Contrast products may not be covered by UL approvals, and could be hazardous. Such use automatically voids all Contrast warranties and responsibility for any problems that may result from such use.



WARNING - SHOCK AND FIRE HAZARD

- Consult a qualified electrician before installing.
- Do not exceed the indicated lamp wattage.



WARRANTY: CONTRAST LIGHTING M. L. INC. guarantees the components against manufacturing defects for a period of one (1) year, under normal use with proof of purchase. The obligation of the manufacturer consists in the cost of the components and does not cover the cost of labor and transport for replacement. For all claims, please contact your local supplier. See our Web site for additional warranty details.

CONTRAST
LIGHTING

CONTRAST LIGHTING M. L. INC.
1009 RUE DU PARC-INDUSTRIEL
LÉVIS QC G6Z 1C5
CANADA

Tel: 1-888-839-4624
Fax: 1-877-839-7057
info@contrastlighting.com
www.contrastlighting.com

PRINTED IN CANADA

EC601 Rev. E
103233
2015-02